

An **ALLSOP** Family Brand PO Box 23, Bellingham, WA 98227 PH 800-426-4303 www.allsop.com

ALLSOP Europe Limited, Industrial Park, Waterford, Ireland PH 353-51-355091 www.allsop.eu

For more information visit www.clingo.com

universal car phone mount...

hands-free mobile device use



A WARNING

Do not install Clingo products over an air bag cover or within the air bag deployment zone

__ SETUP _____

WINDSHIELD MOUNT INSTALLATION

- Step 1: Find a safe* location on the interior of the vehicle's windshield to mount the pedestal. Make sure the windshield is clean and dry. Firmly push the suction cup base (A) against the windshield and flip the base lever toward the suction cup (B) to the locked position (diagram 1).
- Step 2: Adjust the angle of the i-beam arm by loosening & tightening the adjustment knob (C) at the lower side to the desired angle (diagram 1).
- WARNING: Do not use dash mount disc on the windshield, attach the suction cup directly to the windshield.

DASH OR CONSOLE MOUNTING

- **Step 1:** Find a safe, flat location on the dash or console. Clean dust and dirt from the mounting surface if necessary. Remove the paper backing on the adhesive disc and firmly press in place *(diagram 2)*.
- **Step 2:** Place the pedestal's suction cup (A) over the center of the circular disc. Firmly hold the pedestal on top of the disc, flip the base lever toward the suction cup (B) to the locked position.

MOBILE DEVICE INSTALLATION

- Step 1: Remove the protective film from Clingo pad.
- Step 2: This step is only for brand new cradles. Press your device firmly onto the new Clingo pad. Immediately remove the device. If when removing device you find it too difficult, simply touch the Clingo gel pad to your shirt or pants until desired stickiness is reached.
- Step 3: Check Clingo pad for cleanliness and stickiness before each use. Product will not stick properly if the pad is not cleaned suitably. See PROPER CARE & CLEANING for instructions. Cleaning frequency may vary by environment.
- **Step 4:** Wipe dirt and dust from your mobile device. Now attach it firmly to the Clingo pad. <u>DO NOT</u> attach your mobile device to the Clingo pad if it is protected by a leather or silicone case. The Clingo pad <u>WILL NOT</u> stick to leather or silicone.
- **Step 5:** Adjust the angle of the cradle to find the optimal hands-free viewing position.

REMOVING MOBILE DEVICE

- **Method 1:** (*Two-handed*) The safest method, hold the Clingo cradle's "wings" with one hand and with the other hand wrap your fingers around to the back of the device to hold your battery cover. Gently peel the mobile device off the Clingo pad from one side to the other (*diagram 3*).
- **Method 2:** (*One-handed*) Wrap your hand around the phone and while holding the back of your device (battery cover) with your finger tips, use your middle finger or thumb to gently peel the mobile device from the Clingo pad from one side to the other.

PROPER CARE & CLEANING.

Proper care and use of the product is necessary to maintain optimal stickiness on Clingo pad.

FOR BEST CLINGO PAD CLEANING RESULTS


- Step 1: Always remove the cradle from the i-beam arm and your mobile device from the Clingo pad before cleaning.
- **Step 2:** Run warm water with mild soap over Clingo pad and use fingers to remove dirt and dust. <u>DO NOT</u> use solvents to clean the Clingo pad.
- **Step 3:** Let the Clingo pad air dry completely before using. The Clingo pad <u>WILL NOT</u> stick when wet.


FOR OUICK CLEANING


For quick cleaning, use a damp, lint-free wipe or cloth (i.e. chamois) to remove dust, dirt and oil from Clingo pad or simply rinse with water and let it air dry (*diagram 4*). DO NOT use any paper products to wash or dry your Clingo product.

CLINGO PAI

The Clingo pad is permanently bonded to the cradle. Do not attempt to remove the Clingo pad.

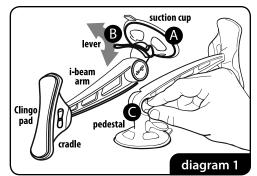

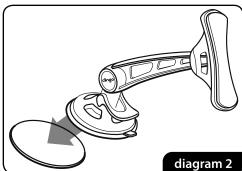

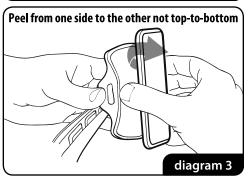



* SAFETY PRECAUTIONS